


CORRECT CURBLESS SHOWER PREP

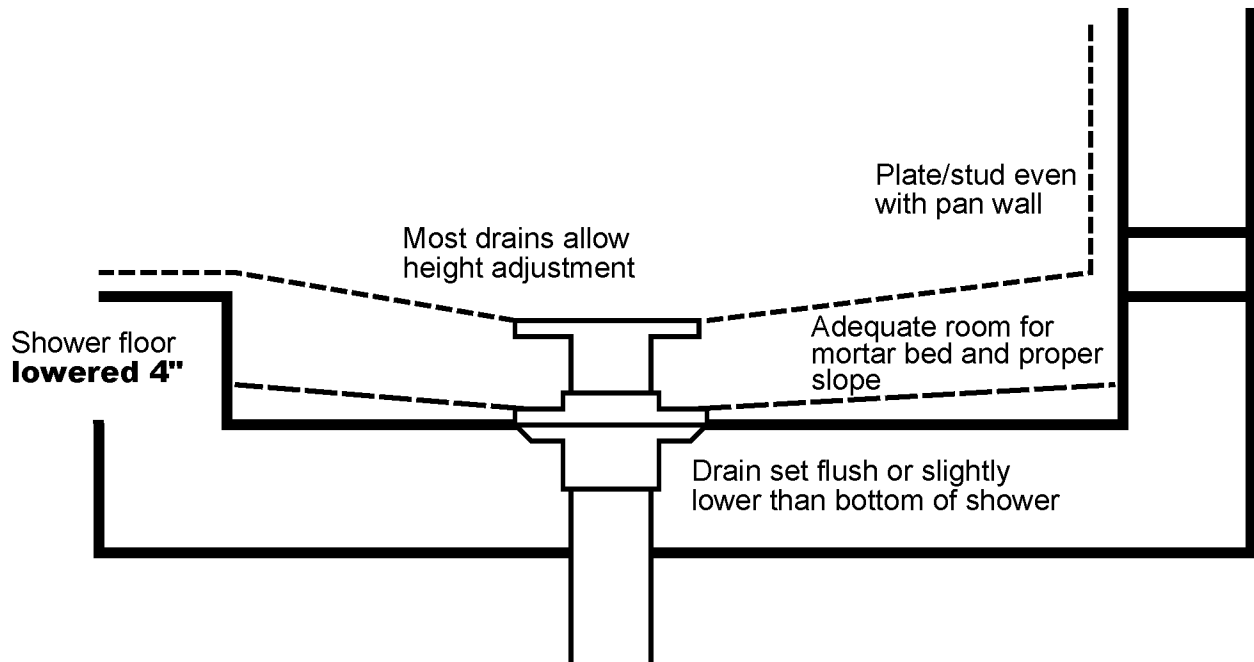

On wooden floors the joists must be cut to lower the floor. That requires that they must be reinforced which is sometimes impractical. Sometimes we can waterproof part of the floor **and adjacent walls** (under drywall) in addition to the shower area, but in no case should the top of the drain be higher than the floor. **WATER flows downhill** folks and mortar beds are like sponges... they suck water through them.

WRONG

